安·防
研究中心
SECURITY PREVENTION INSTITUTE

www.nbkanghua.com

宁波市康华保险箱制造有限公司
地址：宁波市大榭开发区榭南工业园区

Kanghua®
Certified Safe

康華高端智能保險箱
用户手册
User Manual

SINCE 1989

K6系列保险箱

感谢您购买康华保险箱K6系列产品，请在使用本箱之前，
仔细阅读本用户手册，并保存以供参考。
本用户手册中的图示仅为示意图。

Dear Users:

Thanks for purchasing products from Kanghua Company. This is **K6** series safe of business intelligent and household using. Before you use the safe, please read this manual carefully to ensure you operate this safe correctly.

In order to provide perfect aftersales service, we have established user information file for the product. Please make a point of remembering product code and model number .

Product code

The product code is located on the right side of the safe , which is the unique identification code of the safe. Please don't destroy this label . Mark down the product code before you install the safe and check if it's accordance with the code on the manual. Please kindly contact local distributor or us if there is any discrepancy.

Product Code _____

Product Model _____

【Notice】

Please supply us the product code when you ask for warranty or other service .

Catalog

Product Overview 03

Inspect the safe 04

Parts & names 05

Using manual for electronic lock 07

A Overview

B Open the safe for the first time

C Close the safe

D Reset the code

Hide the code 15

Error and alarm 15

Tracking door opening records 16

Date. Time and Week setting 16

Emergence unlock 17

Catalog

Inner door operation guide 17

Battery replacement 18

Usage of LED sensor light 19

Placement of the safe 20

Movement of the safe 21

Fixing of the safe 22

Items storage 23

Routine cleaning and maintenance 24

Do and don’ts 24

Contact info 25

Safety notice 26

Product Overview

Kanghua company is a professional manufacturer integrated with developing, manufacturing professional business and household safe .We devote ourselves to supplying safes of advanced design, humanized security technology and safety for the people who are pursuing high – quality security life .

International advanced laser micro slit cutting technology has been used for K6 series safe products. Whole die – casting with Ultra High Performance Fiber Reinforced cementitious Composites prevents the safe from theft and prying.

This safe has gained CCC certificate guarantee from China Security Technology Center to provide strong security for your valuables .

安·防 研究中心 SECURITY PREVENTION INSTITUTE
www.nbkanghua.com

Inspect the safe

Packing list

Please check if the items inside the package in accordance with below list and contact local distributor if there is any discrepancy.

Name	Qty	Remark
Safe	1set	
User manual	1pc	
AA battery	4 pcs	80SK6 8pcs
Main key	1 set(3pcs)	80SK6 2 sets
Emergency key	1 set (2 pcs)	80SK6 2sets
External power supply box	1pc	
Expansion screw	2 pcs	80SK6/100K6 2pcs
clapboard	1pc	80SK6/100K6 2pcs
Warranty Card	1pc	
LED Sensor light	1pc	

Notice :

Please keep the main lock key ,emergence key ,manual and external power supply box in safe place outside the safe . DO NOT put them in the safe .

Parts and names

※ **Diagram of parts of the safe**

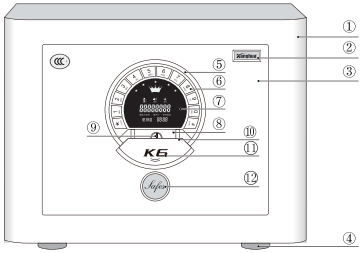

①Box

②rand

③door panel

④ Decoration strip

⑤ Display screen

⑥ key

⑦

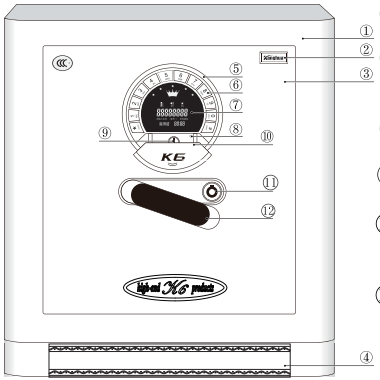

⑧Emergency power supply hole

⑨Main key hole

⑩Sliding

⑪Emergency lock-hole

⑫ Handle

Parts and names

※ **Diagram of parts of the safe**

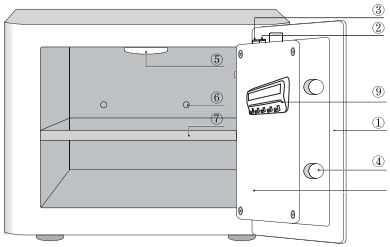

①Door panel

②Setting key

③Battery box

④Set bar

⑤LED sensor light

⑥Fixing hole

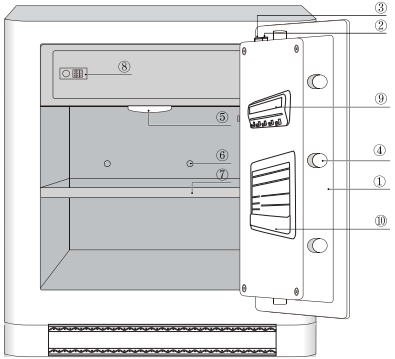

⑦Clapboard

⑧The built-in door

⑨The key hook

⑩Card bag

⑪Emergency power supply box

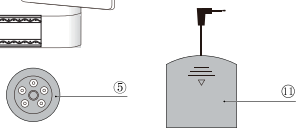

User Manual for electronic lock

Imported high performance computer chip is using for the electronic lock of this safe. Using the most advanced digital chip can improve the safety and also simplify your operation. Please read this user manual carefully before usage.

A. Overview

.This electronic lock has a user code & a master code.

·The factory preset user code: 666666. It is used to open lock, set and change the code. For your safety, please change the preset user code into your personal user code.

·The factory preset master code: 88888888.

·Before enter the code, please slide the cover to startup electronic lock system, or press″#″ to recall the keypad directly.

·The buzzer beeps each time when you press the key.

·Confirm the code by ″#″, but if the code includes eight digits, no ″#″.

·The electronic lock system will sleep if the interval time between you press one key and another key. If you want to continue the code, press ″#″ to recall the keypad and re-enter the whole code.

·Press ″*″ to clear any incorrect digit you have entered. One digit will be cleared each time when you press one ″*″.

·If the incorrect code is entered for three times, the keypad will be locked for 30 seconds and alarm beeps for 30 seconds at the same time. No code functions during this time.

·In case of key lost, the key can not be pulled out when the safe is open. Please take the key as soon as the safe is closed.

B. OPENING THE SAFE FOR THE FIRST TIME

Open with the external power box

1. slide the cover and inster the master key to open;
2. the handle pops out;
3. insert 4 batteries into an external power box, then plug into the jack on the bottom of the keypad;
4. the system will be in standby mode;
5. press any key to recall the keypad, then press ″#″ and enter the right code, confirm by ″#″;
6. the safe buzzer beeps, the display reads ″open″ at the same time;
7. turn the handle clockwise, then safe is open（if designed without handle, please turn the master key to open the door directly）.

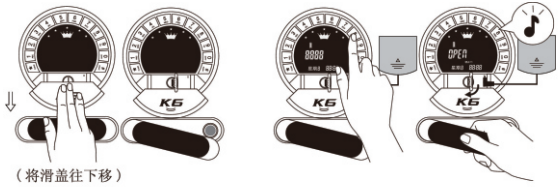

（将滑盖往下移）

CAUTION!

If you enter incorrect code, the display will read ″ Error″ and then run into input state.

Open with the emergency key

1. slide the cover and insert the master key to open;
2. the handle pops out;
3. slide the emergency lock cover in the right, then insert emergency key and turn it clockwise;
4. turn the handle clockwise, then safe is open（if designed without handle, please turn the emergency key anticlockwise and turn the master key at the same time to open the door）.

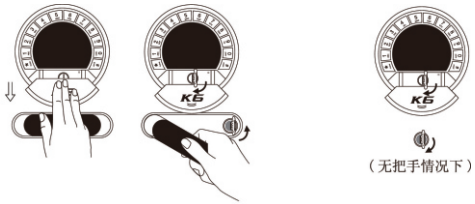
（无把手情况下）

D. CLOSE SAFE

1. close the door and turn the handle anticlockwise;
2. when you hear the sound ″kacha″, the safe is closed and can not be opened;
3. hide the handle.

C. CHANGE & SET THE CODE

a. change & set the user code

1. slide the cover to startup the electronic lock system;
2. press any key to recall the keypad, then the display flashes″-----″;
3. enter the preset user code ″666666″ and confirm by ″#″, then the buzzer beeps and the display reads ″open″ at the same time;
4. press″*″ within six seconds, the display flashes ″-----″, then enter 4-8 digits code and confirm by ″#″;
5. the display reads″No1 into″, which means setting is successful;

New user code is set, and the code will be memorized. From then on, please use the new code to open the safe.

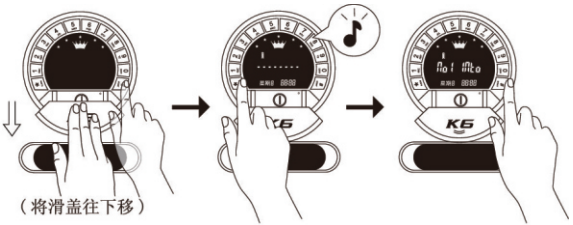

CAUTION!

For your safety and privacy, please change the user code and master code before using.

b. change and set the master code

1. slide the cover to startup the electronic lock system;
2. press any key to recall keypad, then the display flashes″-----″;
3. enter the preset user code″666666″ confirmed by ″#″, then the buzzer beeps and the display reads ″open″ at the same time;
4. press″∗″ within six seconds, the display flashes ″-----″, then enter 4-8 digits code and confirm by ″#″;
5. the display reads″No2 into″, which means setting is successful.

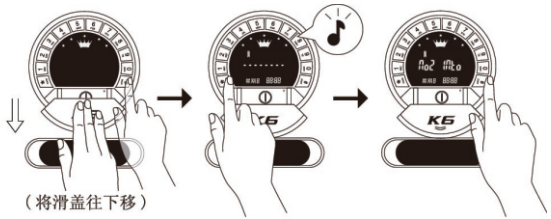

c. recover the preset code by using ″AN″ reset button

If the code is lost, please use the emergency key to open the safe.
1. slide the cover, the inside light turns on;
2. press the reset button ″AN″on the back cover, the user code will be back to ″666666″;
3. press″#″, then press reset button ″AN″ on the back cover, the master code will be back to ″88888888″.

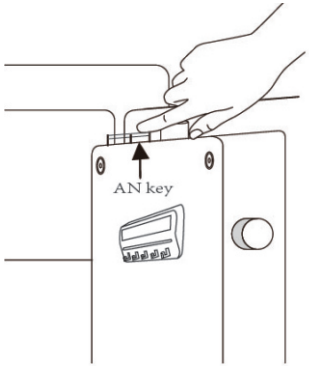

CAUTION!

As both master code and user code can open the lock, suggestion is to use eight-digit code.

If input the incorrect code, please press″∗″ to clear the digit you have entered. One digit will be cleared each time when you press one ″∗″.

HIDE THE CODE

1. slide the cover to startup the electronic lock system;
2. press any key to recall the electronic lock system;
3. press "*", the display will read " ", and then the display will read "00000000" rather than the code any more when you enter the code, while other functions run normal. When you open the door, it will recover the indicator function automatically.

INCORRECT CODE & ALARM DEVICE

·if enter the incorrect code for three times, the keypad will be locked for 30 seconds and alarm beeps for 30 seconds at the same time, the display reads"hold" and" "warning sign. No code functions during this time.

Alarming Setting

when safe is shaking, striking or moving
·slide the cover to startup the electronic lock system;
·press "0", the display reads"bell on", which means it is in alarming state.
When the safe is shaking, striking or moving, it alarms and the screen turns into yellow at the same time for 1 minute. Enter the right code to free the alarm.

NOTE: the alarm should be set every time the door is open, or the alarm will be invalid.

TRACKING DOOR OPENING RECORDS

1. enter the incorrect code, the display will read "opened ";
2. when the backlight will turn on, press"0". The display will show the time and then the code to open."pass--1"is the user code and "pass--2" is the master code. Two seconds later, the date will show;

Press "0" before the records disappear, the display will show the last but one record, the last 45 records can be tracked at most.

SETTING DATE, TIME & WEEK

1. slide the cover to startup the electronic lock system;
2. press "*" to change date and time;
3. press the number key, year, month, date, week, hour, minute step by step by flash digit, and confirm automatically (intelligent calendar, automatically recognize month),then back to the standby mode;
4. during the setting, press"*", backspace and re-enter.

EMERGENCY UNLOCK

A. When the batteries go dead

1. side the cover, insert 4 batteries into an external power box, then plug into the jack on the bottom of the keypad;
2. after the lock system shandies, recall the keypad by press"#";
3. enter the correct code to open the safe.

B. When the electro circuit breakdowns or code missing

1. insert the emergency key and turn the key;
2. turn the handle or master key to open it

Inner door operation guide

1. The preset code: 000

2. Resetting the code:

·turn the code to "000";
·rotate the knob anticlockwise and open the inner door, the code resetting button on the back of door;
·push the button from A to B (marked), then turn the code to personal code;
·confirmed by pushing the button from B to A, then the new code comes into use and the old new is canceled.

3. Please keep your new code, in case of any troubles!

Replace battery

You need to pull out the built-in power supply box to replace batteries, which will not destroy or delete any fingerprint recorded.

Please keep the safe even on the floor when replacing the batteries. This will not change or lose your password. Push the battery box cover on the back of the safe door ,unplug the DC power and remove the battery box and put 4pcs AA batteries into the box according to the positive and negative signs.(Please use alkaline battery). After the replacement is finished, put the battery box back into the trough and plug in the DC power and cover the battery box .

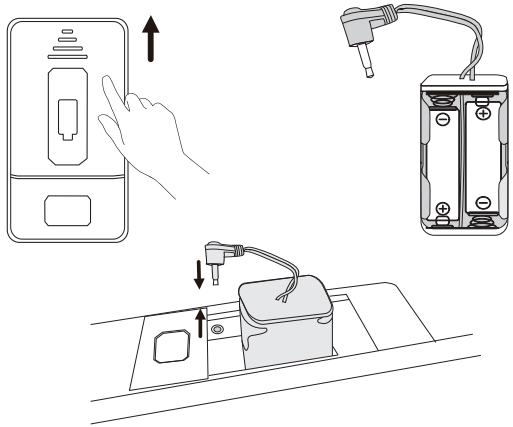

Notice

When voltage of the built-in power is under 4. 8V, the system will remind “LOW BATT”, at the same time, the white signal will lighten. Please replace batteries as soon as possible to ensure normal use.

To use the LED sensor light

This product comes with LED sensor light. The back of the sensor light is magnetic, so you can make the LED sensor light be placed at any iron material place in the safe to light.
When the safe is open, LED sensor light can be lighted automatically through human heat propagation. The light will be turned off automatically to start traditional mode to save energy after there isn't any reduction for one minute.

Installation or replacement of the batteries of the LED sensor light.

When you use the LED sensor light or replace the batteries for the first time, please remove the battery box on the back of LED sensor light counterclockwise ,insert 3pcs 1.5V AAA batteries according to the positive and negative signs.(please use alkaline battery). After that ,please align the card slot and shutoff the battery box cover clockwise.

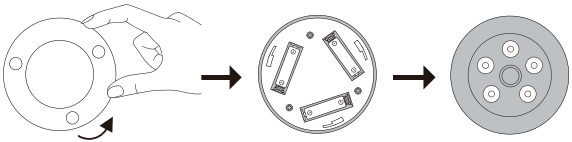

Notice

Please replace the batteries for the LED sensor light in time when the light turns faint.

Placement of the safe

Before you move or place the safe, please make sure the eletronic lock can be used normally. Never move the safe while the safe is open to avoid any accident.

Since the safe is very heavy, it might cause personal accident or goods damage if you use ordinary cart or similar tools. Please ask professional staff to move or place the safe with professional tools.

Notice

It is very important to choose right place to install for the safety of the safe.
Please think about below tips during placement :
a. Don't choose the place which can be seen from the window
b. Don't choose the place which has high flow of visitors
c. Don't choose the place which is near the combustibles
d. Put the safe near the board –bearing wall
e. We suggest you put a layer of protective mat between the safe and the floor (such as carpet, plastic board.)

Move the safe

Since the safe is heavy ,please ask professional staff to move it with professional tools and be careful during movement to avoid any personal accident or goods damage.
Before you move the safe ,please double check below points:
a. If the floor and stairs can bear the weight of the safe
b. If the ceramic tiles or the floor with other materials will be damaged by the movement.
c. If the width of the house doors ,stairs or corners is proper

Notice

Never move the safe when the safe door is open.
Never open the safe when it's placed improperly, the weight of the safe might cause hinges damaged or personal accident . Please check the lock after move the safe.

Fixing the safe

In order to keep the high-lever safety of the safe ,please fix the safe on the floor or the wall.

Please ask professional staff to fix the safe with professional tools. Please make sure the door can work properly and not rotate, open or shutoff automatically while keeping the horizontality of the top the safe during the process of fixing.
Please use proper tool to fix the safe on the floor or the wall.
Step 1: Mark on the wall through the fixing hole on the back of the safe

Step 2: Drill on the marked place on the wall with professional tool

Step 3:Inset the setscrews into the drilled hole on the safe

Step 4:Tighten the inserted setscrews with spanner to complete the fixing.

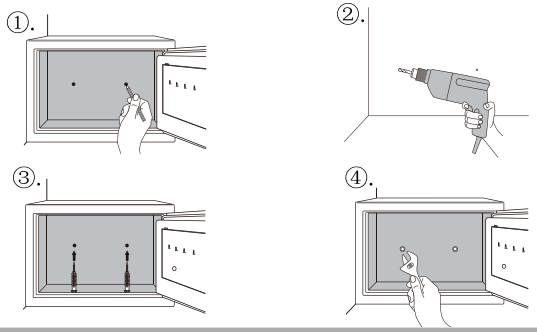

Items storage

A Put the items into the safe evenly to avoid any damage or accident when opening the door.

B Put the documents and valuables on the bottom of the safe to get the max protection.

C If you need to store electronic media (such as U-Disk, CD, computer diskette),please use special storage vessel to provide additional protection.

D Please make sure the items will not force upon the door when the door is shutoff.

E Please never put the liquid-seeped or volatile corrosive gases items into the safe to avoid damage of the other valuables and the safe.

F If it's under damp conditions ,please put some drying agent into the safe to avoid any dampness ,mold or rust.

Routine cleaning and maintenance

A There is no need of additional maintenance of the electronic lock except replacement of the batteries
.

B Clean the safe regularly and don't soak the clapboard of the safe to avoid damage of materials. Use stain remover to clean the stains.

C Please scrub and clean the outside of the safe with soft cloth .Other material might damage the surface painting.

D Please rub gently on the paintings with neutral detergent .Do not polish it.

E There is electroplated layer on the handle and the surface of the lock. Please do not polish them or clean them with solvent . Just clean with soft cloth.

Dos and Don'ts

Please don't put the user manual or the key into the safe. Please don't dismantle the safe if there is any quality problem. Please contact local distributor or our company to solve it.

Note

All technical parameter are subject to change without notice

Contact

Manufacturer :

Ningbo Kanghua safe Manufacturing Co. Ltd

Address :
No.21,,Xinyi Road, Xienan industrial park,
Daxie Development Zone ,Ningbo City

Fax: +86-574-86767584

Free Hotline: +86-4008-808-212

Safety Notice

Please do not open the safe until it's placed evenly since the door is heavy and it might lean forward and cause personal accident or goods damaged.

Please make sure the safe is closed before you leave the house if there are children in the house. Children might be locked in the safe and cause personal accident.